

PORTABLE POWER




NOMAD
The power centre that can go anywhere.

NOMAD 250 SERIES

The Nomad 250 series is the main distribution hub for the Nomad system. It provides the entry point for the incoming supply to the construction site.

From the Nomad 250 any number of other Nomad products can be connected providing power to the whole site.

Metering, higher amperage and different socket configurations are all available as part of the Nomad 250 series.

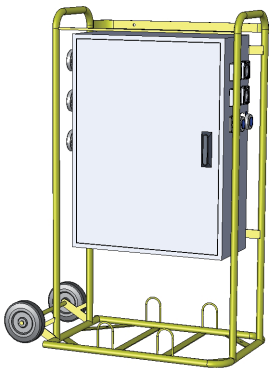

NOMAD 250 MAIN DISTRIBUTION • WT 55KG • INPUT: 250A, 400V, 3PH + E + N

The Nomad 250 is supplied with a combination of three phase and single phase sockets providing portable power to all parts of the construction site.

OUTLETS	QTY	VOLTAGE	CONFIGURATION	APPLICATION
63A	3	400V	IEC, 3PH + E + N	NOMAD 63
32A	3	400V	IEC, 3PH + E + N	NOMAD 32 & PORTABLE BUILDINGS
16A	2	230V	IEC, 2P + E (RCD PROTECTED)	LIGHTING & PORTABLE BUILDINGS
10A	4	230V	AS/NZ, 2P + E (RCD PROTECTED)	LOCAL USE



NOMAD 250C MAIN DISTRIBUTION • WT 55KG • INPUT: 250A, 400V, 3PH + E + N

The Nomad 250C is provided with a separate 250A MCCB for a Crane takeoff.

OUTLETS	QTY	VOLTAGE	CONFIGURATION	APPLICATION
250A	1	400V	3 POLE MCCB	CRANE SUPPLY
63A	3	400V	IEC, 3PH + E + N	NOMAD 63
32A	3	400V	IEC, 3PH + E + N	NOMAD 32 & PORTABLE BUILDINGS
16A	2	230V	IEC, 2P + E (RCD PROTECTED)	LIGHTING & PORTABLE BUILDINGS
10A	4	230V	AS/NZ, 2P + E (RCD PROTECTED)	LOCAL USE

By:



LIGHTING | POWER | DISTRIBUTION | AUTOMATION

**Head Office
Christchurch**

388-396 Tuam St
Phillipstown
Christchurch 8011
New Zealand
P (+64) 3 335 0366
F (+64) 3 335 0980
E switchboards@pdc.co.nz

**Northern Region
Auckland**

30 Fairfax Ave
Penrose
Auckland 1061
New Zealand
P +64 9 526 7881
F +64 9 579 8742
E switchboards@pdc.co.nz